Kenyon Wall

Visual Comfort & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes. NOTE: Must use 2"X4" junction box to accommodate the $2 \frac{1}{2}$ backplate height.

This product is safety listed for damp locations.


Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

SAVE THESE INSTRUCTIONS!

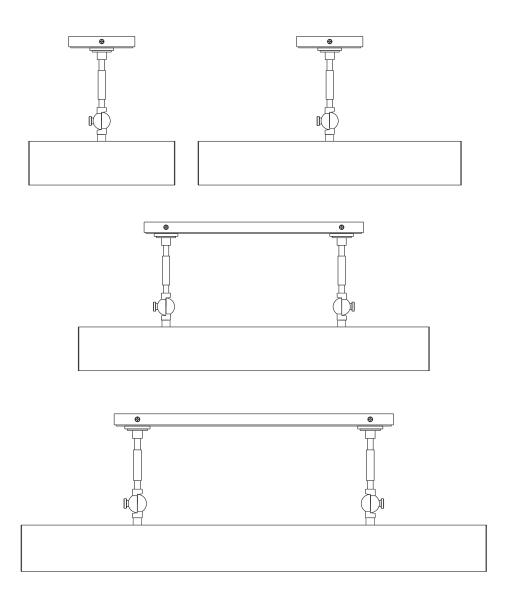

Install the Fixture

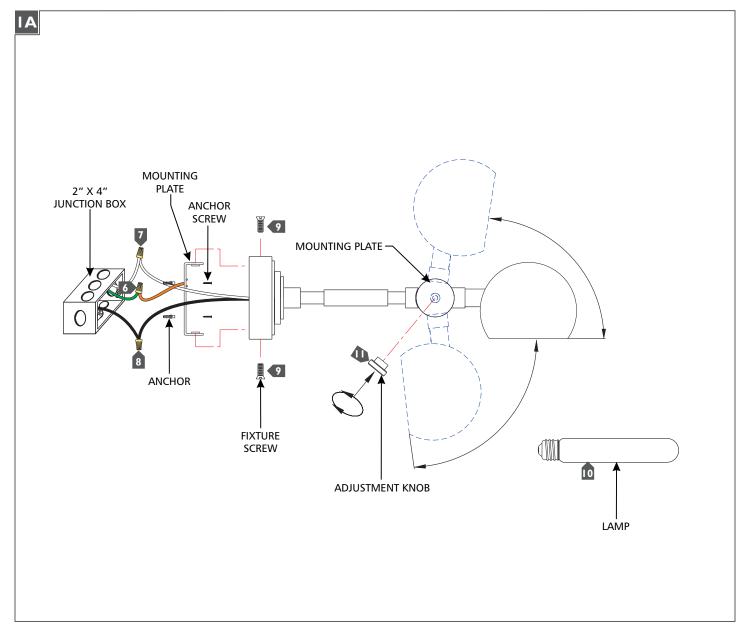

- For models CW1202 & CW1212 only: Temporarily install the mounting bar to the junction box.
- 2 For models CW1202 & CW1212 only: Mark the anchor locations through the holes on the mounting plate, then remove it.
- For models CW1202 & CW1212 only: Install anchors to the marked points.
- 4 Secure the mounting plate to the junction box. NOTE: Must use 2"X4" junction box to accommodate the 2 1/2" backplate height.
- For models CW1202 & CW1212 only: Screw the anchors screws into the anchors.
- 6 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 7 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 8 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 9 Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place using the fixture screws.
- Screw the lamp into the socket. Refer to the label on the lamp socket for Max Wattage Information.
- To adjust the arm, loosen the adjustment knob, adjust the arm to the desired position, and re-tigthen the adjustment knob to secure in place.