

Garrett Pendant

CP1121 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.


GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent lamps may be dimmed with a standard incandescent dimmer. LED lamps may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

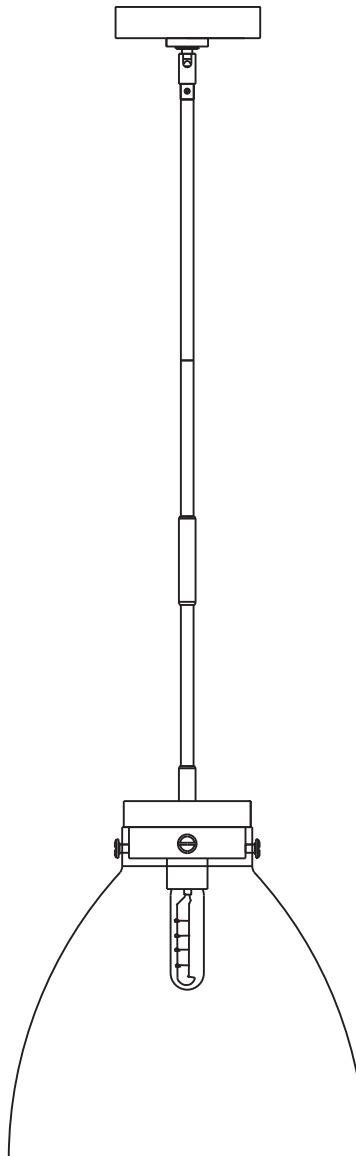

SAVE THESE INSTRUCTIONS!

Install the Fixture

1A

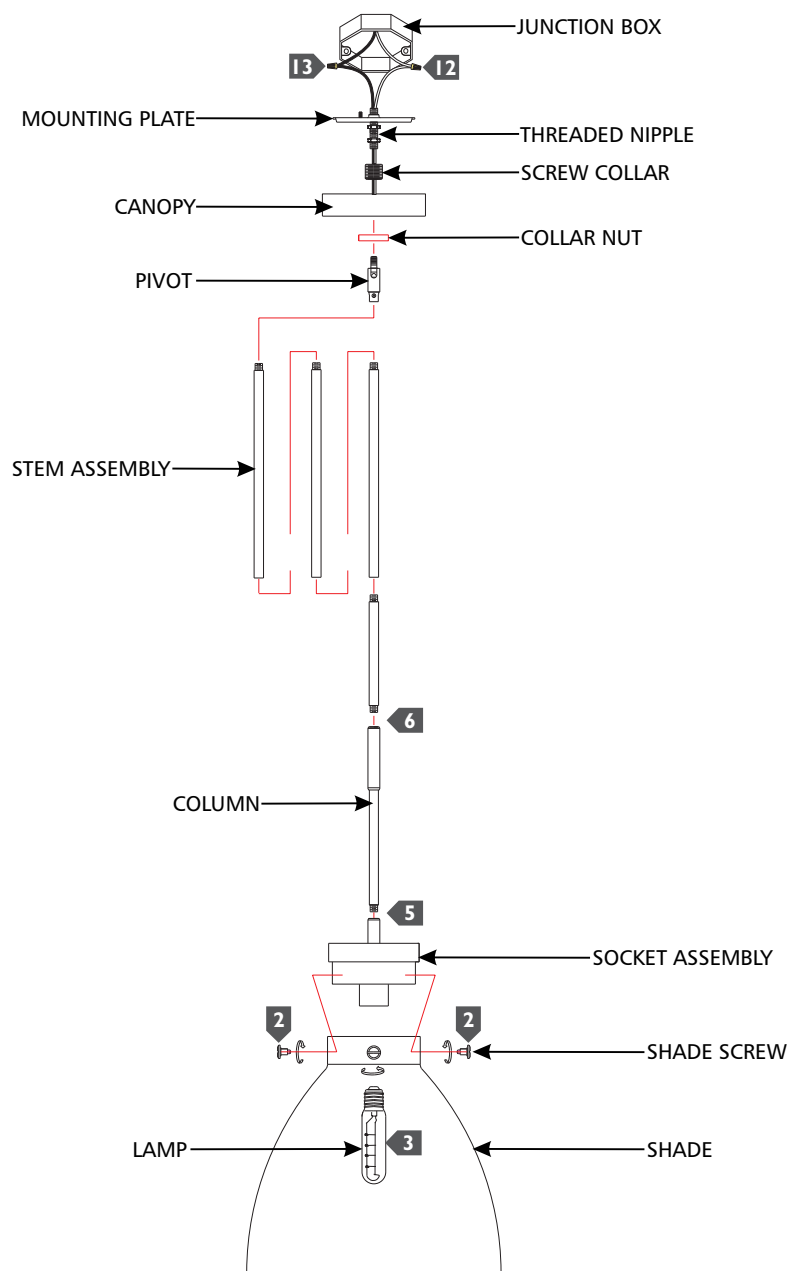

- 1** If necessary, screw the short end of the threaded nipple tightly onto the mounting plate.
- 2** Install the shade to the socket assembly and secure it in place using the shade screws.
- 3** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 4** Determine the wanted height or look of the fixture with the provided stems and pivot, then assemble them by screwing them together.
- 5** Feed the fixture wires through the column, then screw it onto the socket assembly.
- 6** Feed the fixture wires through the stem assembly and screw it onto the column.
- 7** Unscrew the collar nut off the screw collar and place it onto the stem followed by the canopy.
- 8** Screw the screw collar onto the threaded nipple.
- 9** Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem assembly.
- 10** Align and secure the mounting plate to the junction box.
- 11** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 12** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 13** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 14** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the screw collar.