harmonizedhome

PENDANT

IPL2081B03NA 07/23

NEED HELP? Call or Email us first

Our service team is ready to answer your questions... 1-800-265-1833 (English) / 1-800-567-2513 (French)

Monday – Friday 8 am - 5 pm e.s.t.

IN CANADA - ressalescanada@canarmna.ca - IN USA - ressalesusa@canarmna.ca



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS **READ ALL INSTRUCTIONS**

IMPORTANT SAFETY **INSTRUCTIONS SAVE THESE INSTRUCTIONS**

TOOLS AND MATERIALS REQUIRED:





Wrench




SAFETY PRECAUTIONS:


- TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
- 2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 3. CONNECT THE GROUND WIRES (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL BOX.
- 4. TO CLEAN THE FIXTURE, TURN OFF THE POWER, WAIT FOR IT TO COOL, AND WIPE THE FIXTURE WITH A CLEAN, SOFT CLOTH.

NOTE: Product may not look exactly as shown in figures.


INSTALLATION:

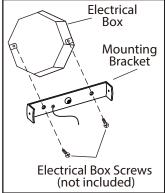


 $\mathbb{1}$ 。 Mount the mounting bracket to electrical box using electrical box screws (not included).

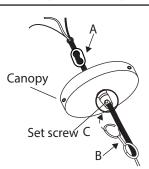

2. Adjust the flexible cord to desired length, adjust the plastic "8" shape cord grip (A). Remove excess chain links(B) and tighten(snug) set screw as shown(B).

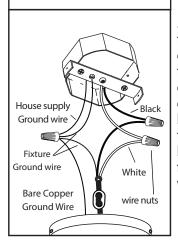

3. Using wire nuts. Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical box. Connect the black wire from the fixture to the black wire in the electrical box and connect the white wire from the fixture to the white wire in the electrical box.

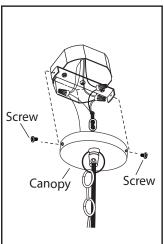

6. Install specified bulb type and wattage (not included).

4. Once wire connections are

completed, carefully tuck wires

electrical box making sure no


 Slide canopy up and hold flush to ceiling. Aligning the


holes in the fixture with the holes on the mounting bracket. Secure fixture in place with

and wire nuts into the

bare wire is visible.

screws.

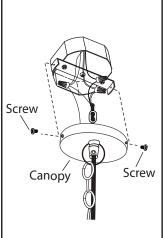

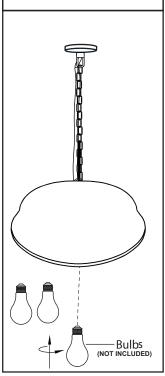

harmonizedhome

LUMIÈRE SUSPENDU

IPL2081B03NA 07/23

BESOIN D'AIDE?

Écrivez-nous ou appelez nous d'abord

Notre équipe de service est prêt à répondre à vos questions... 1-800-265-1833 (Anglais) / 1-800-567-2513 (Francais)

Lundi – Vendredi 8 am - 5 pm e.s.t.

Au Canada - ressalescanada@canarmna.ca - Aux États-Unis - ressalesusa@canarmna.ca

INSTRUCTIONS CONCERNANT LE RISQUE
D'INCENDIES OU LES DOMMAGES CORPORELS
LISEZ TOUTES LES INSTRUCTIONS
INSTRUCTIONS DE SÛI

INSTRUCTIONS DE SÛRETÉ IMPORTANTES GARDEZ CES INSTRUCTIONS

OUTILS ET MATERIAUX REQUIS: Four fournevis A Phillips Coupeur De Fils par le

Clef


Pinces

Fournitures électriques telles que prescrites par les normes locales


MISE EN GARDE:

- 1. FERMER LE COURANT AU DISJONCTEUR AVANT DE DÉBUTER L'INSTALLATION DE LA FIXTURE.
- 2. CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAIT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.
- 3. BRANCHER LES FILS DE LA MISE A TERRE (CUIVRE NU OU VERT) DE VOTRE LUMINAIRE AU FIL DE LA MISE À TERRE (CUIVRE NU OU VERT) OU VIS DE LA MISE À TERRE DANS LA BOÎTE ÉLECTRIQUE.
- 4. POUR NETTOYER LE LUMINAIRE, L'ÉTEINDRE, ATTENDRE QU'IL SOIT FROID, PUIS LE NETTOYER AVEC LINGE PROPRE ET DOUX.
- N.B.: Le produit peut différer de l'illustration ci-dessous.


INSTALLATION:

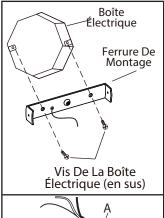


1. Posez la ferrure d'installation à la boîte de sortie électrique à l'aide des vis de la boîte (en sus).

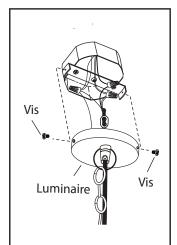


4. Une fois les connexions de fils terminées, insérez soigneusement les fils et les capuchons de connexion dans la boîte électrique en vous assurant qu'il n'y a aucun filament nu (sur le fil blanc et le fil noir) visible au niveau des capuchons de connexion.

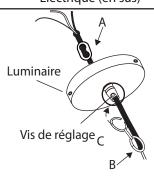


Ajustez la corde flexible à la longueur désirée, ajustez la poignée de cordon en forme de "8" (A). Resserrez (doucement) l'ensemble de vis tel qu'illustré (B).



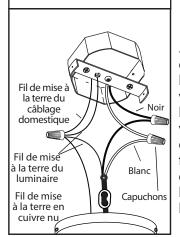

3. À l'aide des capuchons de connexion. Branchez les fils de la mise a terre (cuivre nu ou vert) de votre montage au fil de la mise a terre (cuivre nu ou vert) ou vis de la mise a terre dans la boite electrique. Posez le fil noir de la fixture au fil noir dans la boite électrique et posez le fil blanc de la fixture au fil blanc dans la boite.

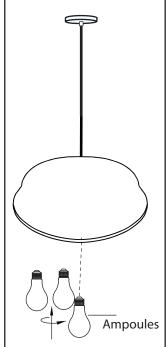

6. Posez l'ampoule de type et de wattage requis (en sus).