Café 8 and 12 Light Chandelier

3187908,3187912 1.0

Visual Comfort & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:


These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations. Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information. This instruction shows a typical installation.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

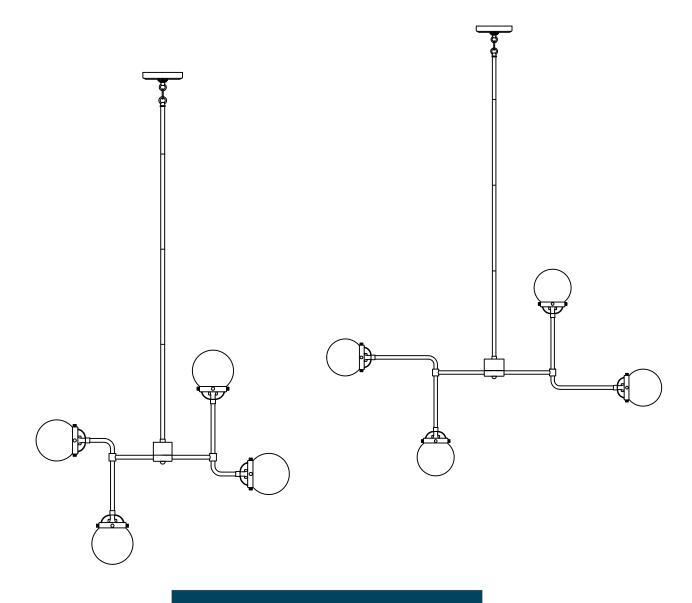

SAVETHESE INSTRUCTIONS!

Install the Fixture

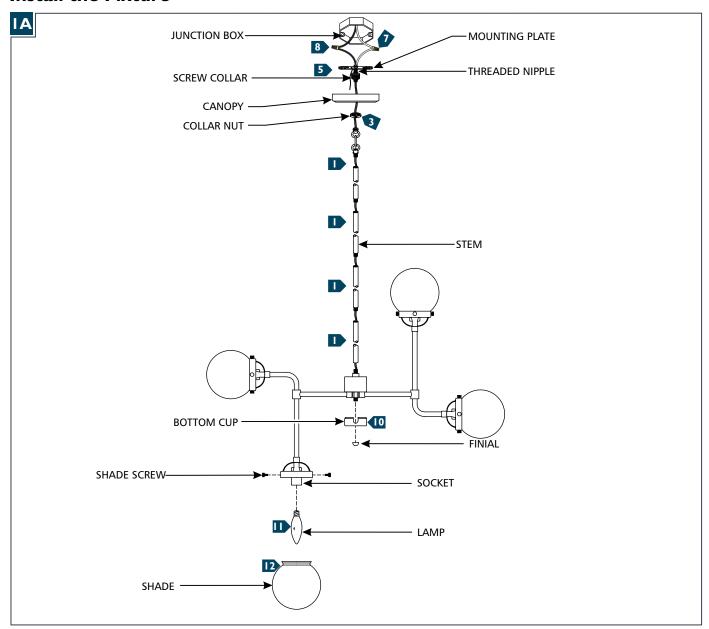

- Determine the wanted height or look of the fixture with the provided stems and/or chain and assemble them by screwing them together. All the parts may be used alone or used in combination.
- 2 Feed the fixture wires through the stems/chain and screw the assembly to the socket assembly.
- Unscrew the collar nut from the screw collar and place it onto the stem/chain followed by the canopy.
- Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem/chain assembly.
- Align and secure the mounting plate to the junction box.
- 6 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 7 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 8 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly onto the screw collar.
- Place the bottom cup on to the fixture and secure with the finial.
- Screw the lamp into the socket. Refer to the label in the socket for Max Wattage Information.
- Place the shade over the socket and secure it in place by installing and tightly screwing the shade collar nut onto the socket.