Visual Comfort & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction

This product is safety listed for damp locations.


This instruction shows a typical installation.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

SAVE THESE INSTRUCTIONS!

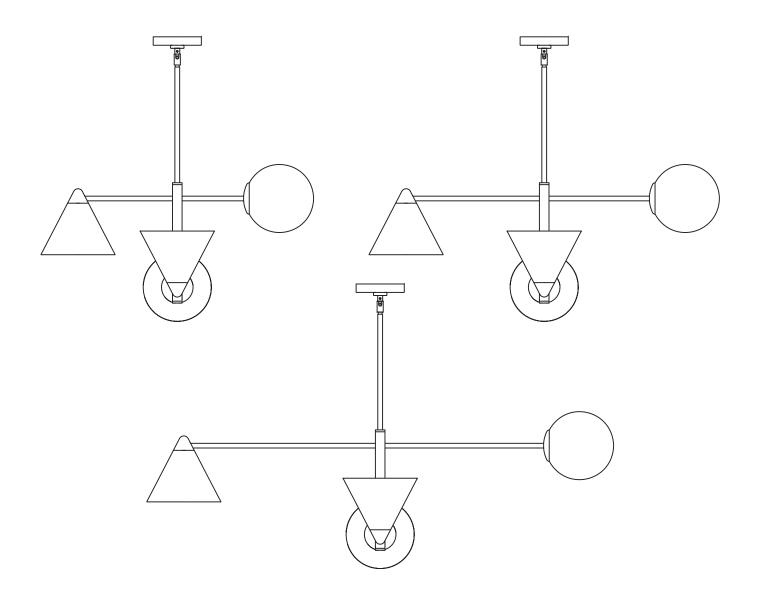

Install the Fixture

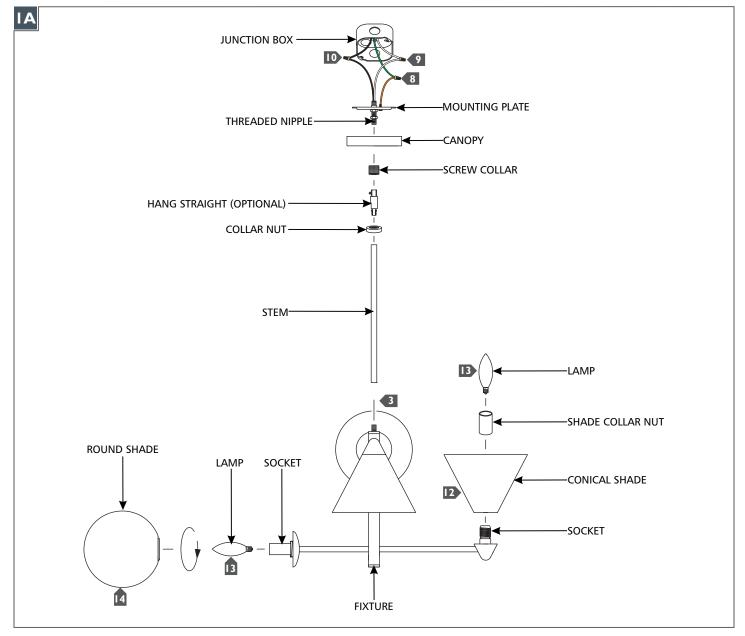

- If necessary, screw the short end of the threaded nipple to the mounting plate.
- Determine the wanted height or look of the fixture with the provided stems and hang straight (optional, for sloped or uneven ceilings) and assemble them by screwing them together.
- 3 Feed the fixture wires through the stem/hang straight assembly and screw the assembly to the fixture.
- 4 Unscrew the collar nut off the screw collar and place it onto the stem/hang straight assembly followed by the canopy.
- 5 Screw the screw collar onto the threaded nipple.
- 6 Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem/hang straight assembly.
- 7 Align and secure the mounting plate to the junction box.
- 8 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 9 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- Meatly place all the wires into the junction box, place the canopy onto the ceiling and secure it in place with the collar nut.
- Place the conical shade onto the socket and secure it in place by screwing the shade collar nut onto the socket. Do not over tighten. Repeat for remaining conical shades.
- Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information.
- 14 Place the round shade over the lamp and secure it in place by screwing the round shade to the socket. Do not over tighten. Repeat for remaining round shades.