

**Arden Chandelier**

CC1254, CC12610, CC12716 | I.1

## VISUAL COMFORT &amp; Co.

## STUDIO COLLECTION

**GENERAL PRODUCT INFORMATION:**

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.


Incandescent lamps may be dimmed with a standard incandescent dimmer. LED lamps may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.


**CAUTION - RISK OF FIRE**

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

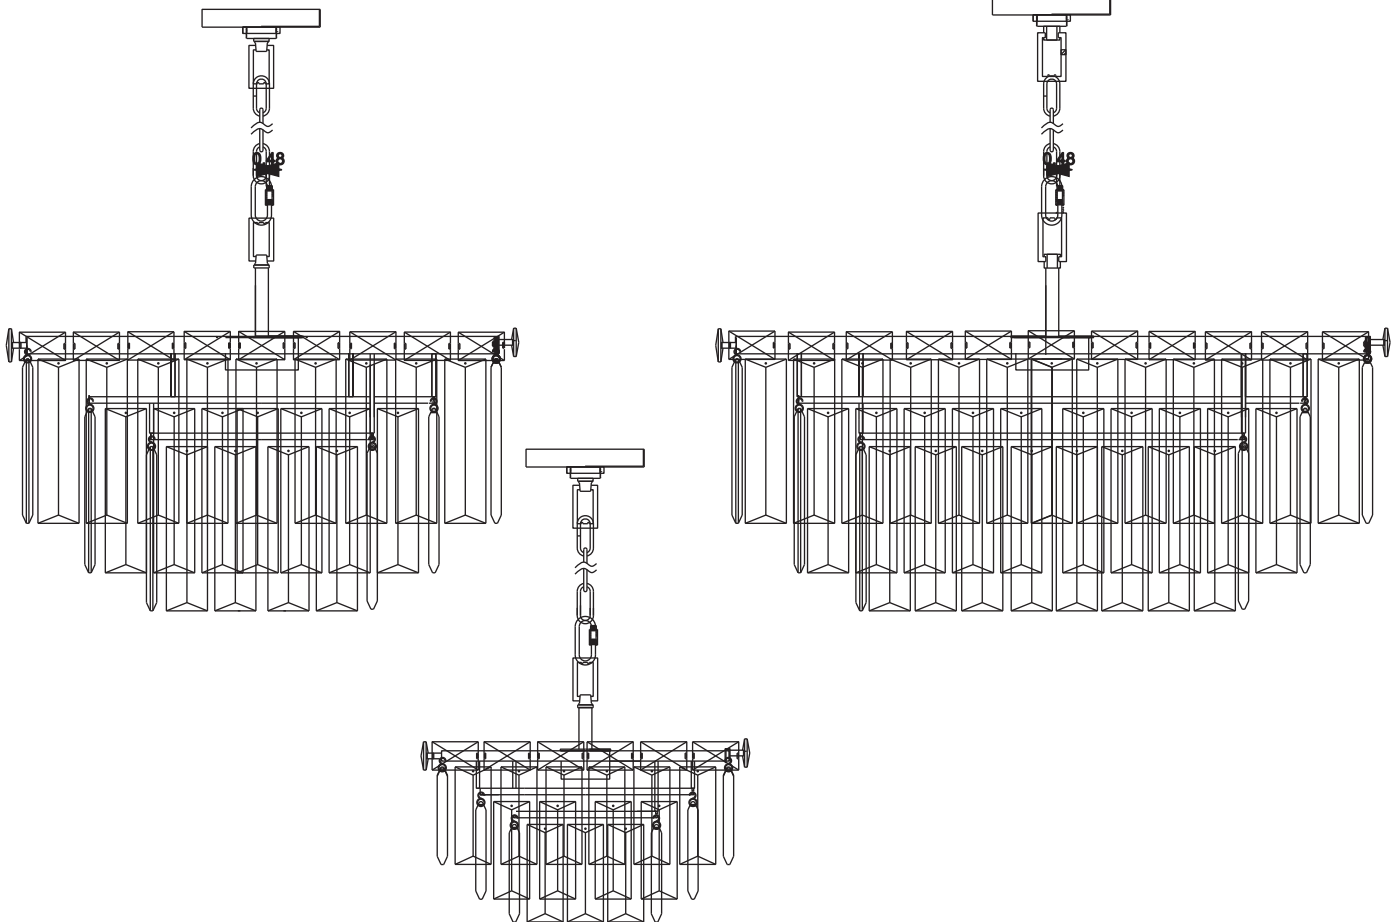**SAVE THESE INSTRUCTIONS!**

# Install the Fixture

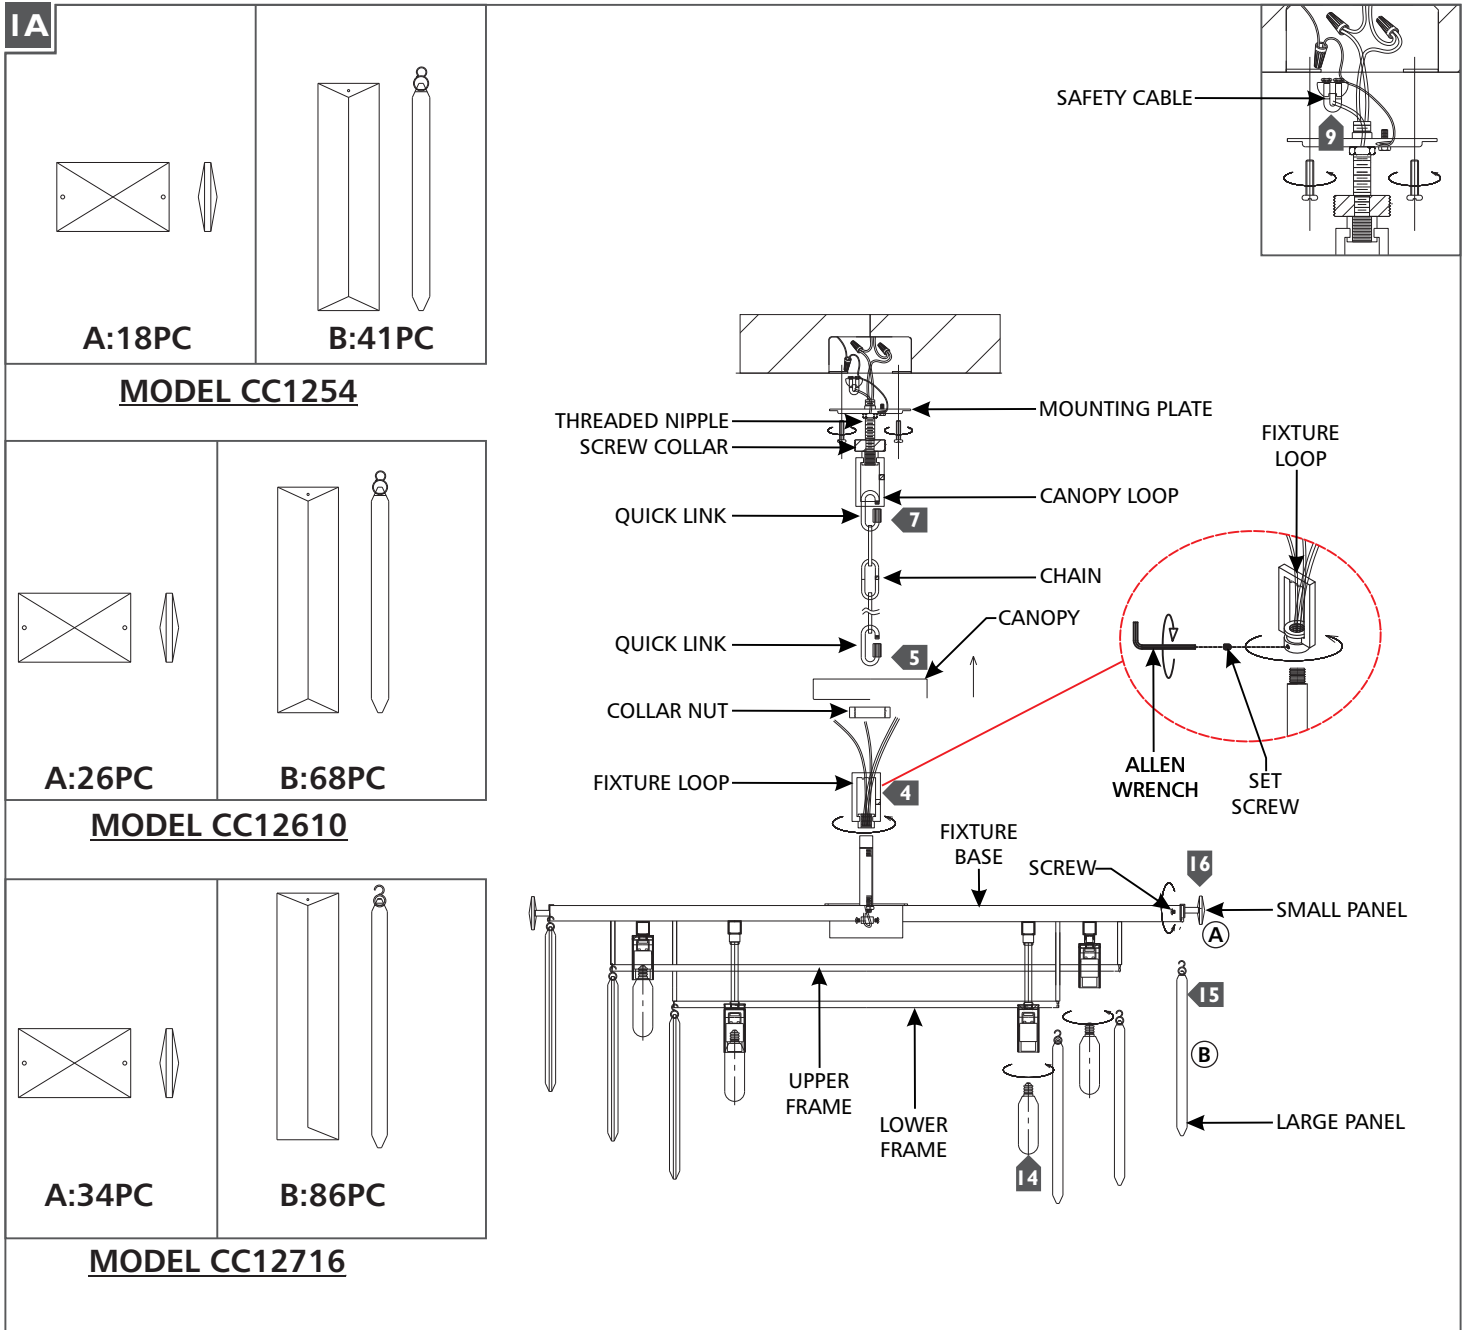

- 1 If necessary, screw the short end of the threaded nipple tightly onto the mounting plate, then screw the screw collar onto the threaded nipple.
- 2 Secure the mounting plate to the junction box.
- 3 Determine the wanted height of the fixture and remove a portion of the chain from the bottom by opening a link with pliers.
- 4 Feed the fixture wires through the fixture loop, screw it onto the fixture, and secure it by tightening the set screw using the provided Allen wrench.
- 5 Install a quick link to bottom end of the chain, then secure the quick link onto the fixture loop.
- 6 Unscrew the collar nut from the screw collar, then install the collar nut and the canopy onto the chain (in that order).
- 7 Install a quick link onto the remaining end of the chain, then secure the quick link onto the screw collar.
- 8 Weave the cord through the chain, collar nut, and canopy, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 9 **For Model CC12716 Only:** Attach the safety cable to a solid structure in accordance with local building code.
- 10 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 11 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 12 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 13 Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the screw collar.
- 14 Screw the lamps into the sockets. Refer to the label on the lamp socket for Max Wattage Information.
- 15 Install the large panels to the lower frame by sliding the loops through the opening at the end of the frame. Repeat for upper frame.
- 16 Install the small panels to the fixture base using the screws.