


## ASSEMBLY INSTRUCTIONS

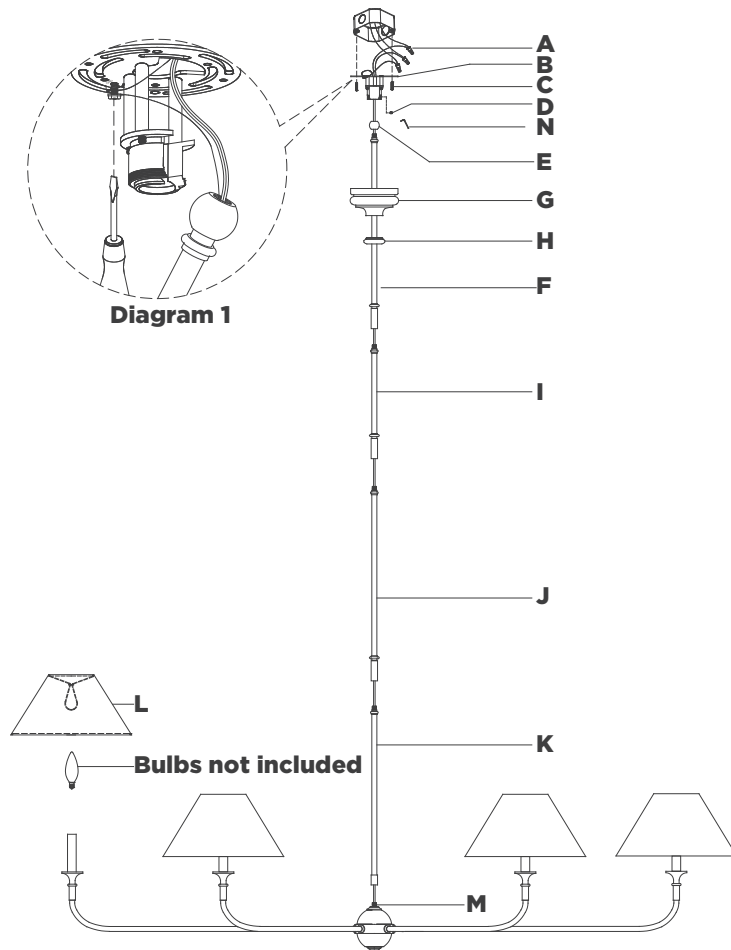

## Piaf Oversized Chandelier

Item # TOB5454

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver      Slotted Screwdriver      Wire Strippers  
Wire Cutters

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(B)** from canopy **(G)** by removing collar ring **(H)**.
3. Install mounting plate **(B)** to the junction box and secure with mounting screws **(C)**.
4. Feed electrical wires through rod **(K)** and connect to fixture body **(M)**. Repeat for rod **(I & J)**, connecting to rod **(K & J)**.
5. Feed electrical wires through top rod **(F)** and remove swivel ball **(E)** from top rod **(F)**.
6. Let collar ring **(H)** and canopy **(G)** pass through top rod **(F)**, then secure swivel ball **(Q)** to top rod **(H)**.
7. Holding fixture upright, slide collar ring **(H)** and canopy **(G)** down and rest on coupling, then connect top rod **(F)** to middle rod **(I)**.

**NOTE:** Slide components down slowly to avoid damage.

8. Hang fixture swivel ball **(E)** to the center of mounting plate **(B)** and secure with set screws **(D)** using provided wrench **(E)** (see diagram 1).
9. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".

## ASSEMBLY INSTRUCTIONS

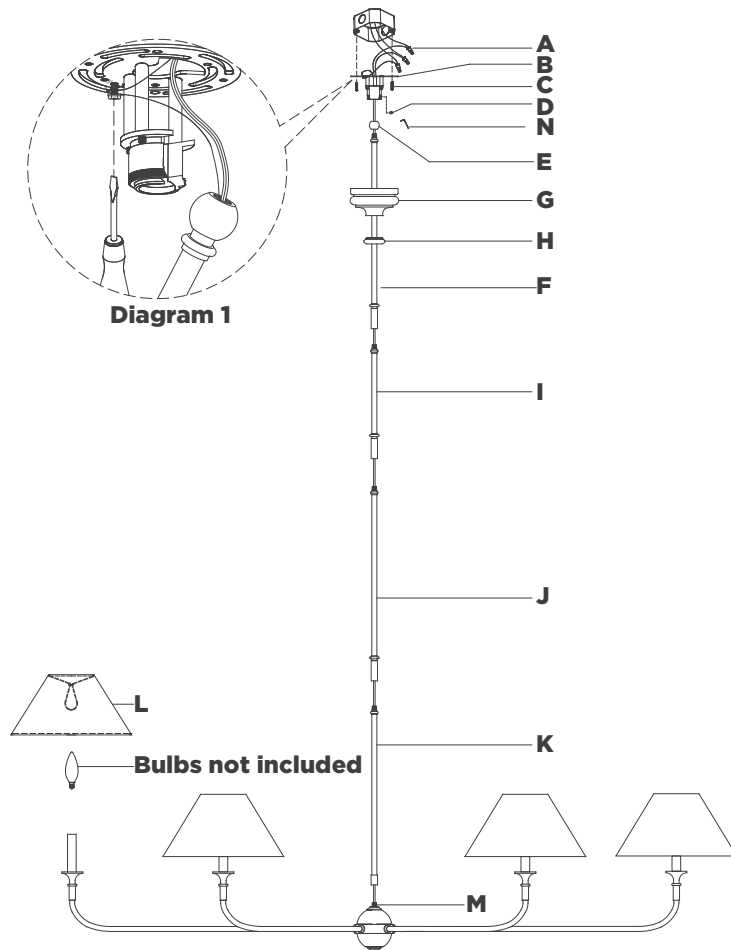

## Piaf Oversized Chandelier

Item # TOB5454

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(A)**.

**NOTE:** It is imperative that the fixture is grounded.

10. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.
11. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.

**CAUTION:** Do not reverse the hot and neutral connections.

12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install canopy **(G)** to mounting plate **(B)** and secure with collar ring **(H)**.
14. Install light bulb into the socket.
15. Clip shades **(L)** onto light bulbs.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.